 


Lexmark CX725dhe (corridor printers) User Manual

Device Control Panel:

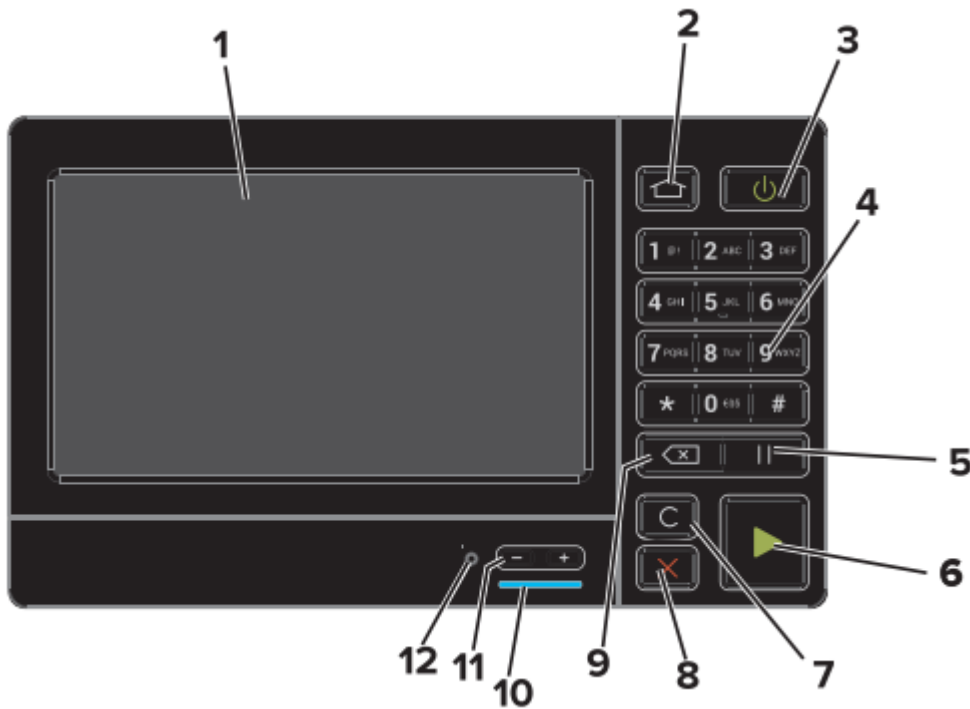

 
1. Display
2. Device Main Menu
3. Power On/Off
4. Keypad
5. Pause
6. Start Work
7. Reset Settings
8. Cancel Job
9. Delete
10. Volume Up/Down
11. Headphone/Speaker Connection
12. Headphone/Speaker Connection

Device Login

Press **"Start"**:



2. Enter your login credentials and click **“Next”**:

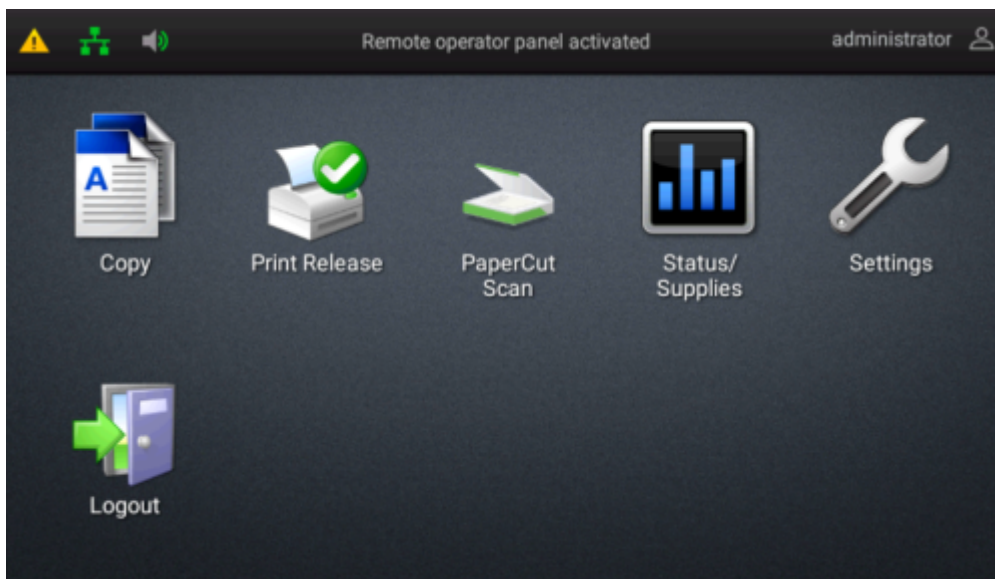

Copy

Print Release

 
PaperCut Scan – Scanning to Email

Status / Supplies – Device Status, Consumables

Settings

Logout

Copying

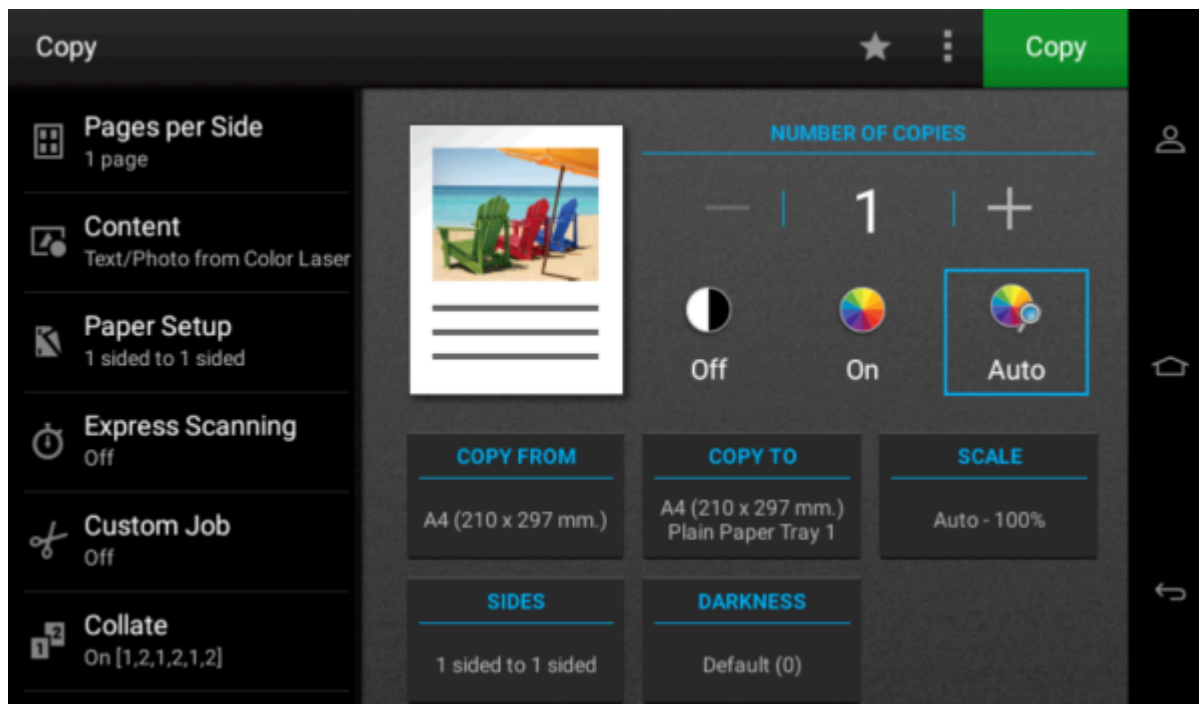

Number of copies

Off - Black and White Copying

On - Color Copying

Auto - Automatic Color Detection for Copies

Copy from - Format of Documents to be Copied

Copy to - Format of Copied Documents

Scale - Enlargement/Reduction

Sides - Single-Sided/Double-Sided Pages

Darkness - Darkening/Lightening

Printing

PaperCutMF[®] **Held Print Jobs**

Document	Pages	Cost	
Untitled - Notepad	1	0.01Eur	 
Test Page	1	0.05Eur	 



Refresh **Print All**  **Back**

- Spausdinti dokumentą

Print All

Refresh - Refresh List of Documents to be Printed


Back - Return to Main Menu


Scanning

PaperCutMF[®] **Scan to My Email**


Account: My Personal Account Balance: (unrestricted)

To: administrator@klientas.lt

Subject: Your scan (Scan to My Email) 

Filename: scan_administrator_2023-03-28-13-23-06 

Color PDF
1-sided
A4 Portrait
300 DPI

Start Prompt for more pages  **Settings**

Start – Start Scanning

Prompt for more pages – Scan Multiple Documents into One File (PDF)

Settings – Scanning Settings:

PaperCut MF[®] Settings

Duplex mode
1-sided | 2-sided

Orientation
Portrait | Landscape

Paper size
A4

File type
PDF | TIFF | JPEG

DPI
200 | 300 | 400 | 600

Color mode
Color | Grayscale | B&W

Start Prompt for more pages **Back**

Duplex mode

Orientation

File type

DPI – dokumento rezoliucija

Color mode – Document Resolution


Start

Back


Device Maintenance

****Replacing the Toner Cartridge****

 1. Open the side doors.


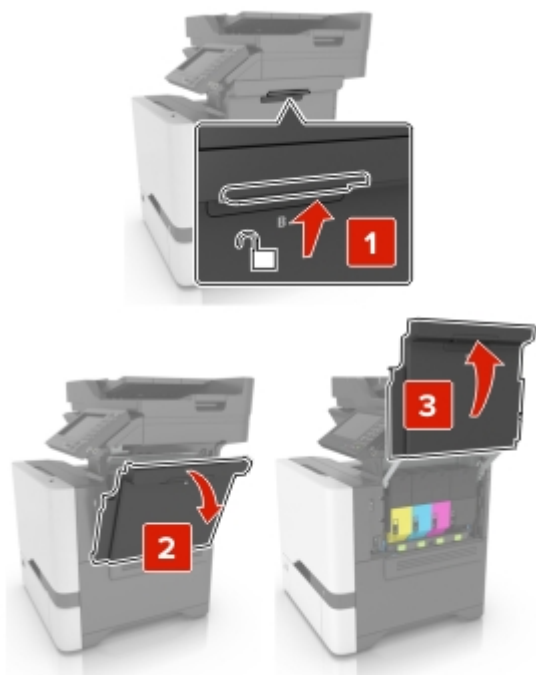


 2. Remove the toner cartridge.

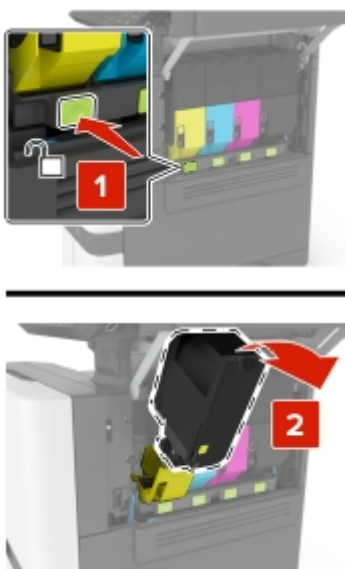

3. Unpack the new toner cartridge.

  4. Insert the new toner cartridge.

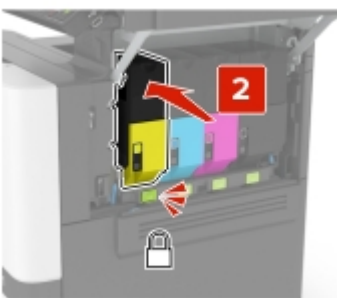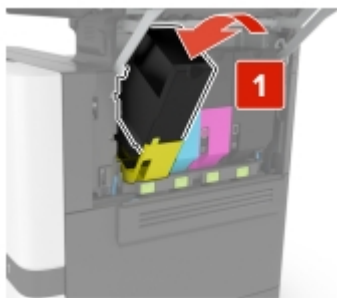


5. Close the side doors.

Adding Paper


1. Open the paper tray.

 Attention!: To avoid paper jams, do not change the paper while the device is operating.

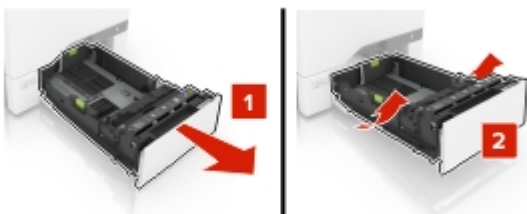

2. Adjust the guides according to the size of the paper being loaded.

 Attention!: Use the markings on the bottom of the tray for proper size adjustment.

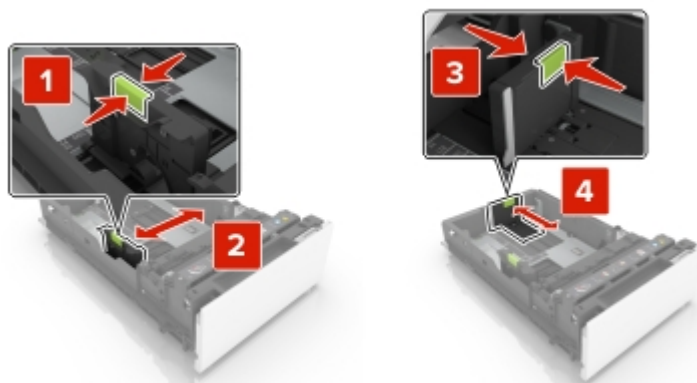


3. Separate and align the paper sheets before loading.



4. Insert the paper with the print side facing up.

 Attention! Ensure the paper quantity does not exceed the indicated level. Overloading may cause paper jams.

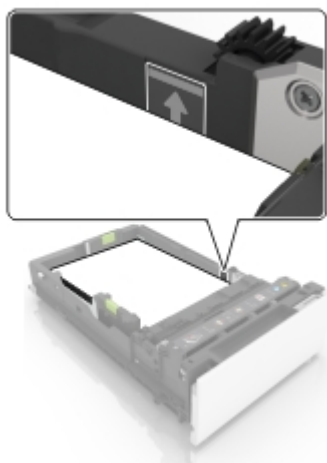

5. Close the tray.

From:

<https://vikis.kvk.lt/> - **KVK Vikis**

Permanent link:

<https://vikis.kvk.lt/doku.php?id=en:pas:spaus:darbuot:lexmark>

Last update: **2024/08/21 07:16**

