Lexmark CX725dhe (corridor printers) User Manual

Device Control Panel:



- 1. Display
- 2. Device Main Menu
- 3. Power On/Off
- 4. Keypad
- 5. Pause
- 6. Start Work
- 7. Reset Settings
- 8. Cancel Job
- 9. Delete
- 10. Volume Up/Down
- 11. Headphone/Speaker Connection

Device Login

Press "Start":



2. Enter your login credentials and click **"Next"**:



Сору

Print Release

PaperCut Scan – Scanning to Email

Status / Supplies - Device Status, Consumables

Settings

Logout

Copying



Number of copies

- **Off** Black and White Copying
- **On** Color Copying
- Auto Automatic Color Detection for Copies
- Copy from Format of Documents to be Copied
- Copy to Format of Copied Documents
- Scale Enlargement/Reduction
- Sides Single-Sided/Double-Sided Pages
- Darkness Darkening/Lightening

Printing

PaperCutMF	Held Print Jobs	
Document	Pages Cost	
Untitled - Notepad	1 0.01Eur	
Test Page	1 0.05Eur	1/1
Refresh Print All	Back	

- Spausdinti dokumentą

Print All

Refresh - Refresh List of Documents to be Printed

Back - Return to Main Menu

Scanning

PaperCut MF Scan to My Er	mail		
Account: My Personal Account	Balance: (unrestricted)		
™ administrator@klientas.lt			
Subject Your scan (Scan to My Email)	Color PDF		
	1-sided		
Filename	A4 Portrait		
scan_administrator_2023-03-28 -13-23-06	300 DPI		
Start Prompt for more pages	Settings		
https://www.vikis.kvk.lt/	Printed on 2025/07		

Start - Start Scanning

Promt for more pages - Scan Multiple Documents into One File (PDF)

Settings – Scanning Settings:

PaperCut MF Settings						
Duplex mode		File type				
1-sided	2-sided	PDF	TIFF	JPEG		
Orientation		DPI				
Portrait	Landscape	200	300 400	600		
Paper size		Color mode				
<mark>∂</mark> A4		Color	Grayscale	B&W		
Start Prompt for more pages Back						
Duplex mode						
Orientation						
File type						

DPI – dokumento rezoliucija

,

Color mode - Document Resolution

Start

Back

Device Maintenance

Replacing the Toner Cartridge

1. Open the side doors.





2. Remove the toner cartridge.



- 3. Unpack the new toner cartridge.
- 4. Insert the new toner cartridge.





5. Close the side doors.

Adding Paper

1. Open the paper tray.

Attention!: To avoid paper jams, do not change the paper while the device is operating.



2. Adjust the guides according to the size of the paper being loaded.

Attention!: Use the markings on the bottom of the tray for proper size adjustment.



3. Separate and align the paper sheets before loading.



4. Insert the paper with the print side facing up.

Attention! Ensure the paper quantity does not exceed the indicated level. Overloading may cause paper jams.



5. Close the tray.

From: https://www.vikis.kvk.lt/ - **KVK Vikis**

Permanent link: https://www.vikis.kvk.lt/doku.php?id=en:pas:spaus:darbuot:lexmark

Last update: 2024/08/21 07:16

